


KODIAK PVC PANELS

REPLACING DAMAGED PVC PANEL

- 1) Cut damaged panel #2 vertically through length of panel
- 2) Remove damaged panel #2 from good panel #3
- 3) Cut remaining damaged panel and nailing flange where shown, along with the male lip of good panel #1
- 4) Cut nailing flange from new panel.
- 5) Insert new panel into panel #3
- 6) Silicone new panel (without nailing flange) to panel #1

OVERVIEW

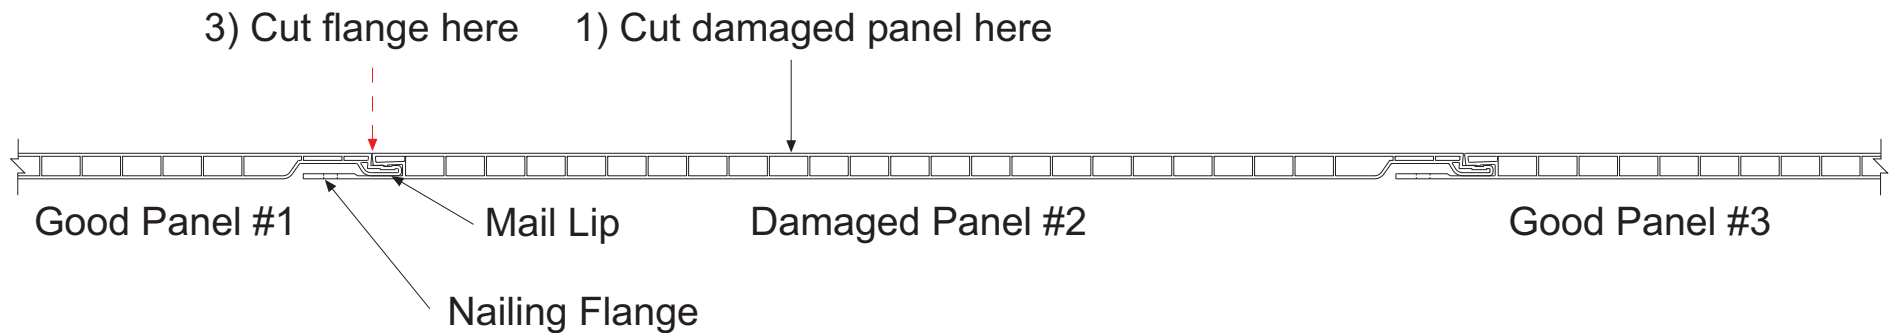

DETAIL AFTER REPLACEMENT

