



TRIMS & INSTALLATION

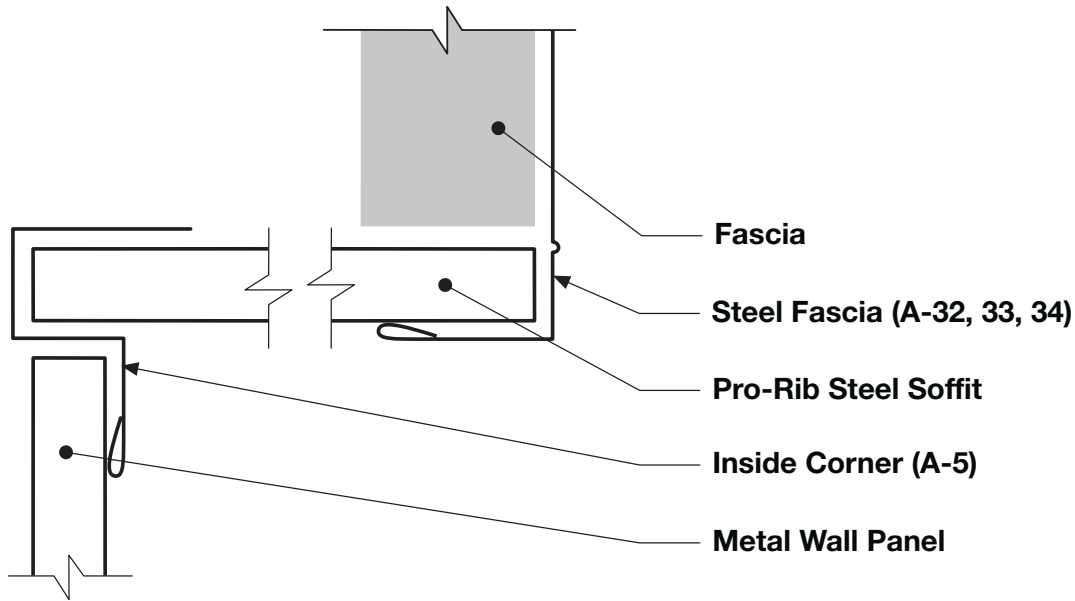

You may also need these trims:

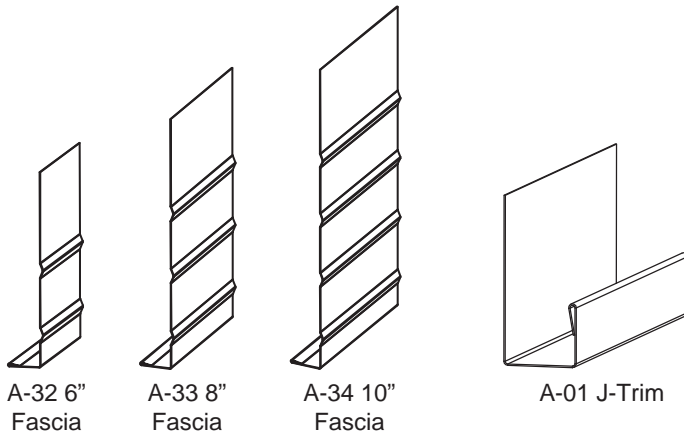


Recommended fastener:



Tru-Grip GT
#9 x 1"
Hex Washer Head
(Colour matched)

HOW MUCH SOFFIT DO YOU NEED?

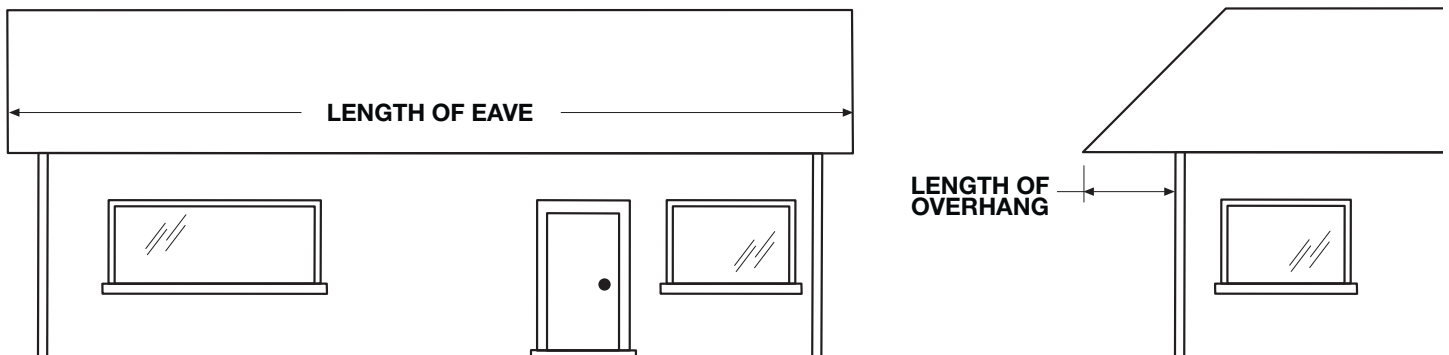

1. Measure the length of eave or gable.
2. Divide the length of eave or gable by / 3 always rounding up.
3. This number will give you the number of pieces you require.
4. Measure the overhang to determine your cut length.