



Panel Ends (Ridge and Eave)


←
Prevailing Wind



Intermediate Panels (on purlins)



Intermediate Panels (between purlins)

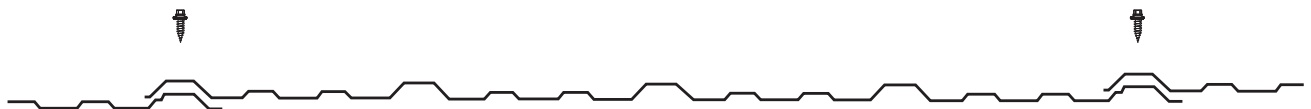

Notes:

- It is recommended panels should be fastened every 2' on center.
- Butyl tape on side laps is required when roof slope is below 3/12.
- Butyl tape not required for wall application.