


BIGG-FRAME SLIDING DOOR SYSTEM - WORKSHEET

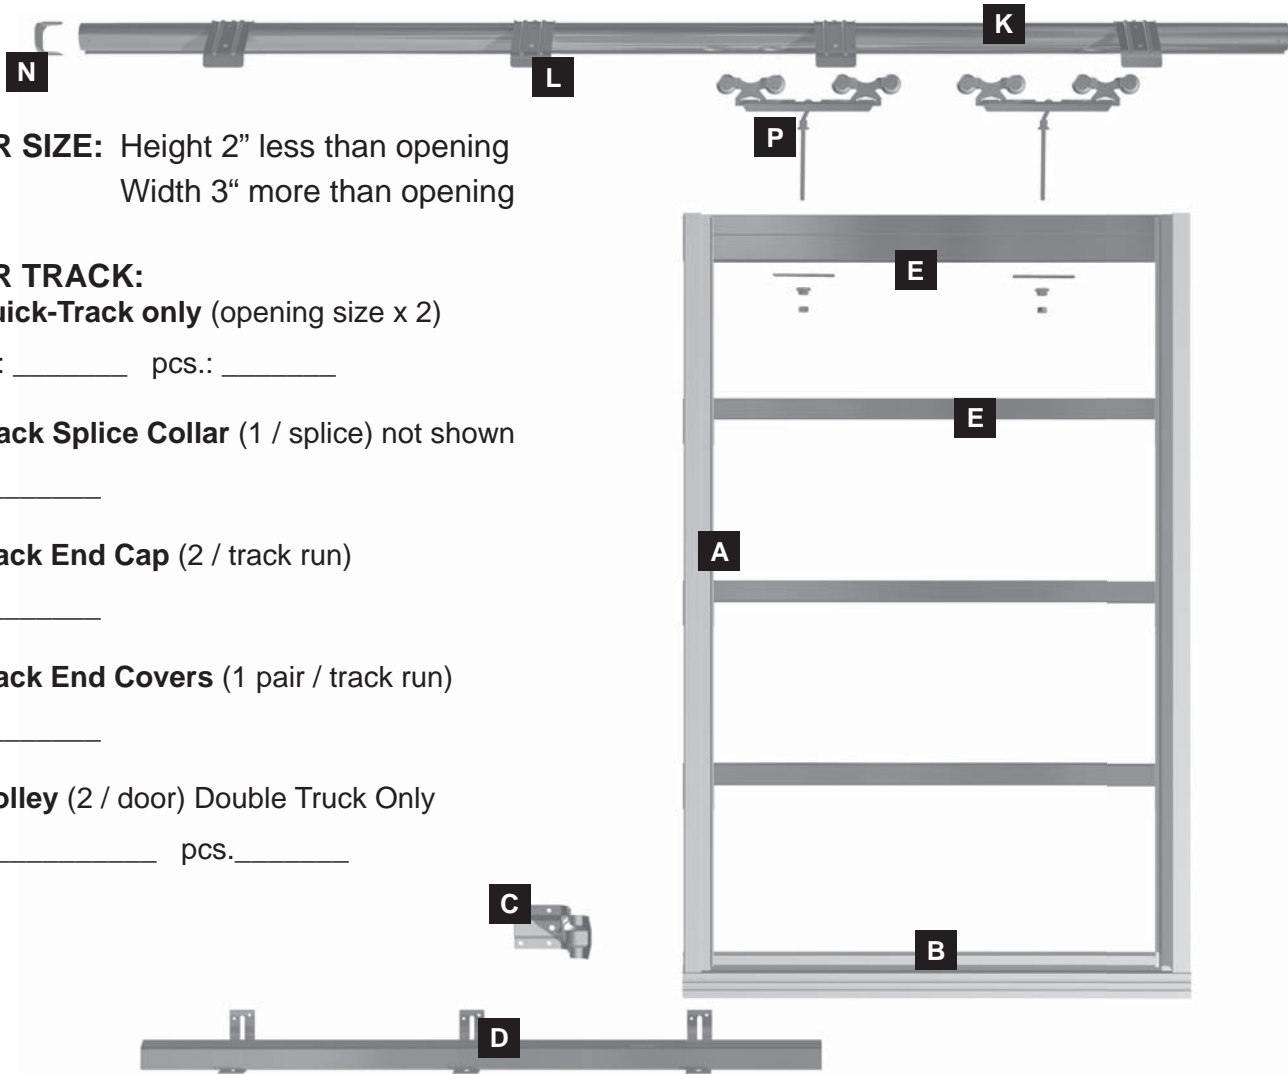

DOOR SIZE: Height 2" less than opening
Width 3" more than opening

DOOR TRACK:

(K) Quick-Track only (opening size x 2)

length: _____ pcs.: _____

(O) Track Splice Collar (1 / splice) not shown

pcs.: _____

(N) Track End Cap (2 / track run)

pcs.: _____

(N) Track End Covers (1 pair / track run)

pcs.: _____

(P) Trolley (2 / door) Double Truck Only

style: _____ pcs.: _____

DOOR GUIDES:

(D) Stay Rollers (1/door) pcs.: _____

(F) Jamb Latches (2/door) pcs.: _____

(G) Door Handles (1/door) pcs.: _____

(C) Adjust-A-Stop (1/door) pcs.: _____

Note: When using stay guide rail system, use adjust-a-stop stop for the door stop.

(D) Stay Guide Rail

Note: Length needs to be 60% of door width. Use with alum. bottom door rail.

length: _____ pcs.: _____

DOOR RAILS:

(A) Vert. Side Rail (length of door height, 2/door)

length: _____ pcs.: _____

(B) Bottom rail (length of door width, 1/door)

length: _____ pcs.: _____


(E) Horz. box girts (length of door width, 24" o.c., double horizontals at top)

length _____ pcs.: _____


INSTALLATION NOTES:

- Door track length is to be double the width of the opening size.
- Single trolleys will support a door up to 800lbs.


BIGG-FRAME SLIDING DOOR SYSTEM

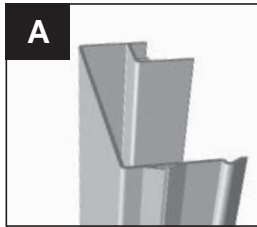


Vertical Side Rail
#391

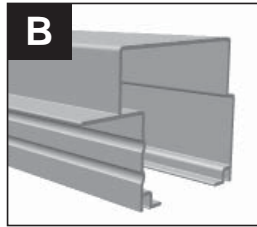


Bottom Rail
#394

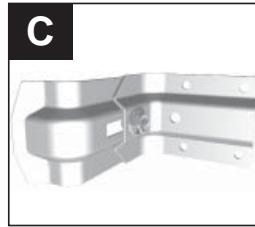


Adjust-A-Stop
#710899

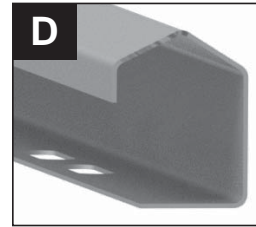


Stay Guide
6', 8' & 10' Lengths

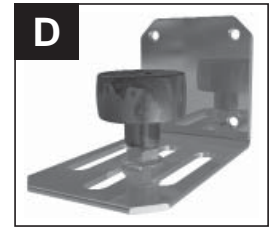


Offset Stay Roller
#710806

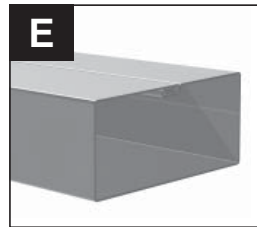

Horizontal Box Girt
#235

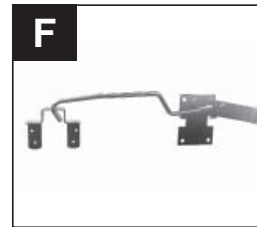

Center Latch - 15"
#714380

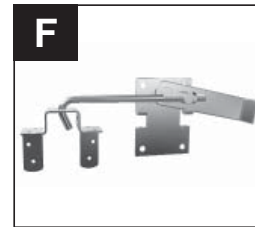

Jamb Latch - 7" or 4"
#718106 & 728091




Jumbo Door Pull
#710654



Vertical Double Couple
#396



Center Stop
#711271

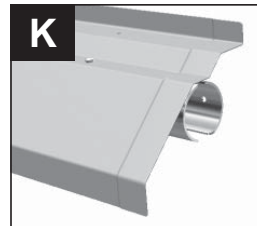

Quick Track
#711489



Track End Caps
#711489



Splice Collar
#465101



Trolley - Double
#714420